


# SUBURBAN TRACTOR

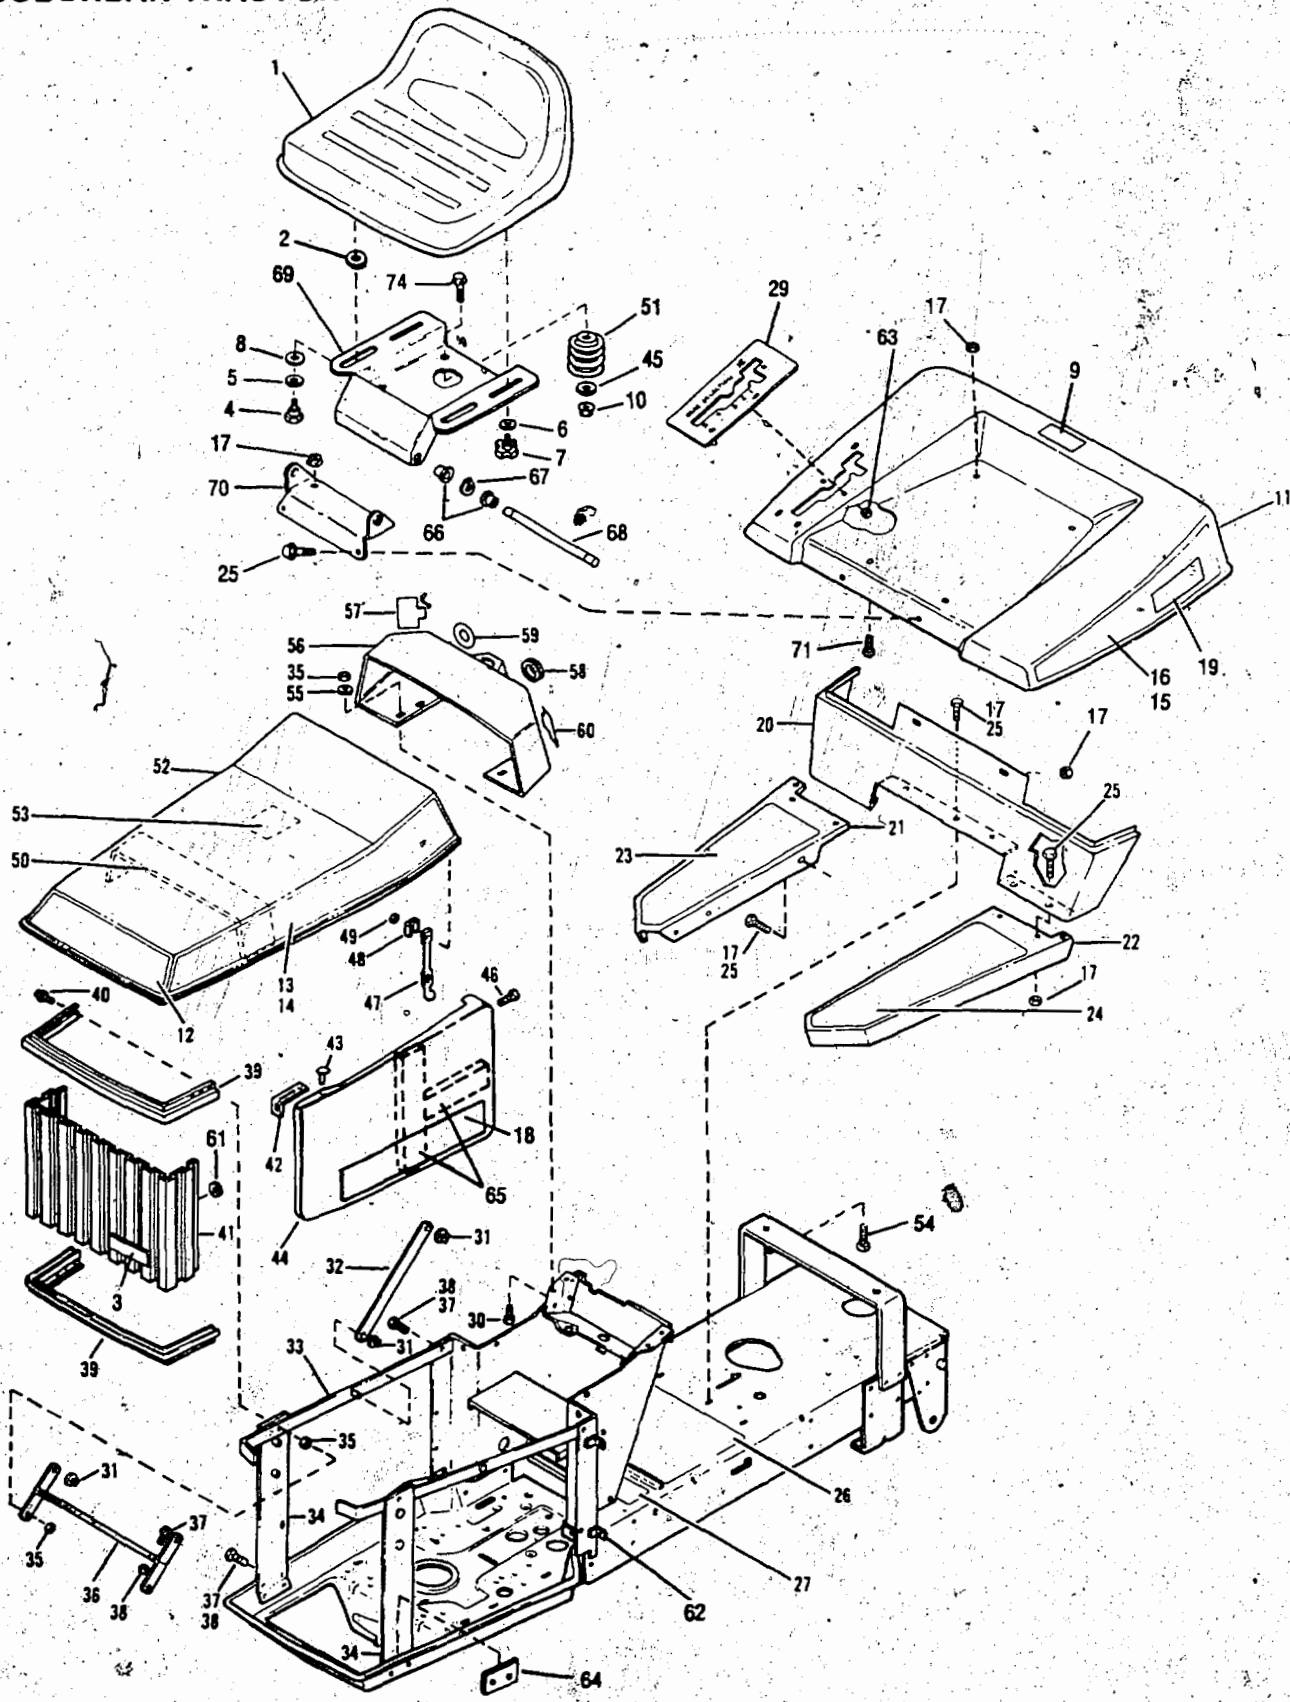


**BODY WORK AND TRIM ASSEMBLY**

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	1755949	Seat	1	38	1186389	Flange Lock Nut 1/4-20	12
2	1893445	Washer	2	39	1742493BDG	Grille Cap	2
3	1756043	Logo	1	40	1100069	Hex Hd. Screw 1/4-20 x 1	2
4	1754125	Shoulder Bolt	2	41	1755948BDG	Grille	1
5	1705793	Washer, Nylon	2	42	1753912	Side Cover Guide	4
6	1107383	Flat Washer 3/8	2	43	1756629	Pop Rivet 1/8 x 1/4	8
7	1734269	Knob	2	44	1743554BDG	L.H. Side Cover	1
8	1706782	Washer, Wave	2		1743553BDG	R.H. Side Cover	1
9	1754519	Decal, Fuel	1	45	1701055	Washer	2
10	1186393	Fl. Nut 3/8-16	2	46	1115815	Phil. Hd. Machine Screw #10-24 x 5/8	4
11	1756154BOW	Rear Fender	1	47	1727127	Rubber Latch	2
12	1756038	Hood Decal	1	48	1727126	Clip	2
13	1756037	Hood Decal R.H.	1	49	1185985	Keps Nut #10-24	2
14	1756036	Hood Decal L.H.	1	50	1744067	Sealing Strip	1
15	1754624	R.H. Fender Decal	1	51	1755449	Ext. Spring	2
16	1756176	L.H. Fender Decal	1	52	1744051BDG	Hood Assembly	1
17	1186391	Flange Nut 5/16-18	13	53	1755934	Service Instrument Decal	1
18	1756041	Side Cover Decal L.H.	1	54	1736098	Carr. Bolt 5/16-18 x 5/8	2
	1756042	Side Cover Decal R.H.	1	55	1107381	Flat Washer 1/4	4
19	1756034	Decal, Model	2	56	1750686	Instrument Panel	1
20	1743987BOW	Running Board Support	1	57	1753413	Throttle Decal	1
21	1751805BOW	R.H. Running Board	1	58	1747144	Cap	1
22	1751803BOW	L.H. Running Board	1	59	1754521	Ignition Switch Decal	1
23	1742665	R.H. Foot Pad	1	60	1754604	Choke Decal	1
24	1755729	L.H. Foot Pad	1	61	1754126	Retainer	2
25	1186330	Fl. Lock Screw 5/16-18 x 7/8	10	62	1742934	Angle Bracket Speed Nut	4
26	1755944	Center Foot Pad	1	63	1750532	Nut, Self Thd	6
27	1755942	Instruction Decal	1	64	1754415	Spacer Plate	2
28	1186347	Fl. Screw 3/8-16 x 1	2	65	1758766	Seal	4
29	1759452	Quadrant	1	66	1755779	Bearing	4
30	1111599	Hex Hd. Screw 1/4-20 x 5/8	4	67	1185257	Retaining Ring	2
31	1747836	Retaining Ring	6	68	1755622	Rod	1
32	1742459BDG	Hinge Link	2	69	1755620STB	Support Assembly	1
33	1758587BDG	Hinge Strap Assembly	2	70	1756466STB	Pivot Bracket	1
34	1752914BDG	Grille Support Assembly	2	NI	1735223	Spray Paint (White)	
35	1734398	Lock Nut 1/4-20	8	NI	1736796	Spray Paint (Dark Green)	
36	1742458BDG	Hinge Link	2				
37	1186309	Flange Lock Screw 1/4-20 x 5/8	12				

• Common Hardware - Purchase Locally (Grade 5 where applicable)

# SUBURBAN TRACTOR

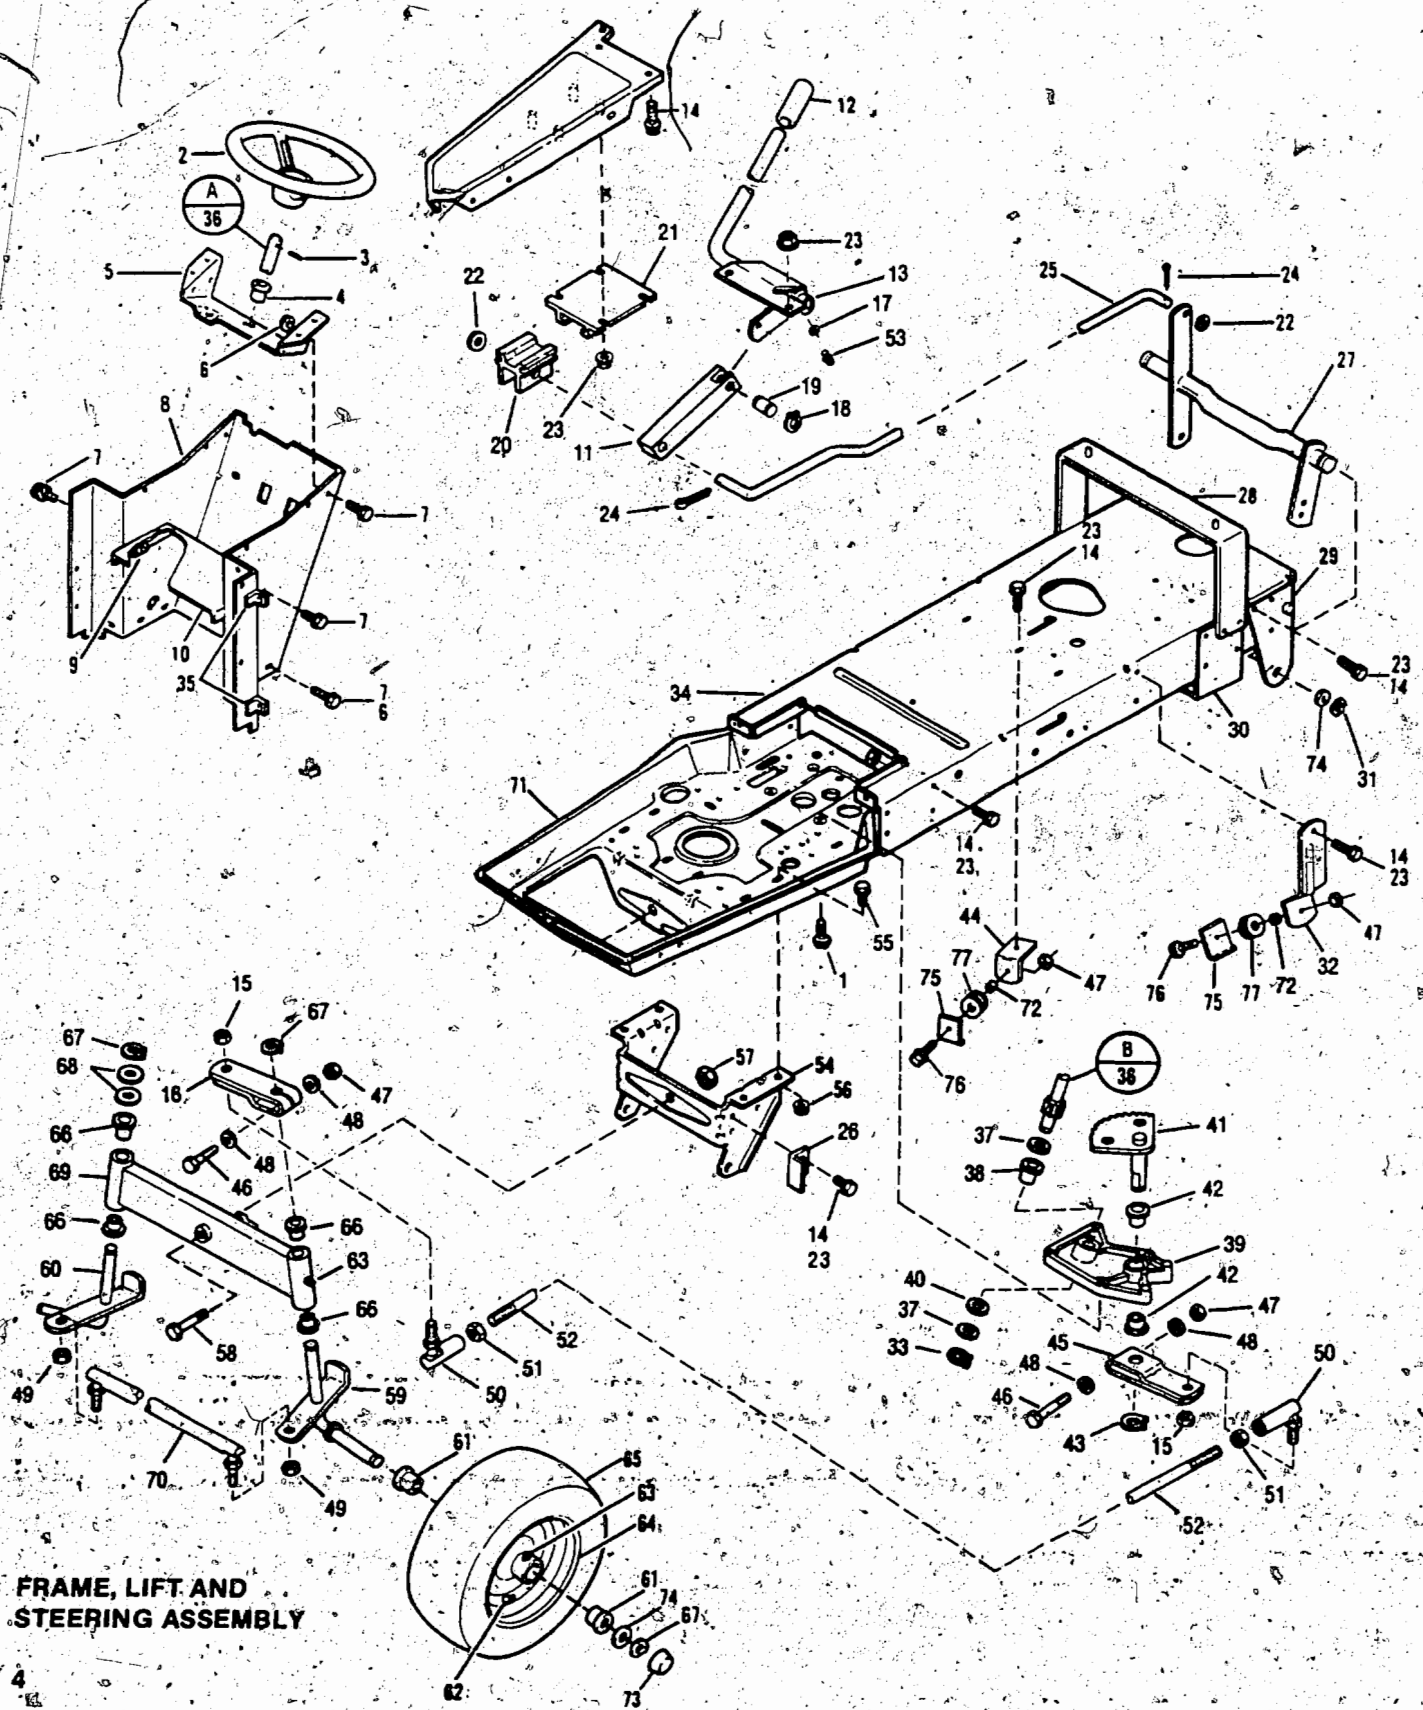


FRAME, LIFT AND STEERING ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	1724491	Thd Form Screw 5/16-18 x 3/4	4	40	1715301	Thrust Washer	1
2	1747804	Steering Wheel	1	41	1750501	Sector Gear Assembly	1
3	• 1185279	Roll Pin 1/4 x 2-1/4	1	42	1185386	Flange Bearing	2
4	1185632	Flange Bearing	1	43	1113527	Retaining Ring	1
5	1756608	Steering Shaft Support	1	44	1747316BDG	Bracket	1
6	• 1186389	Flange Nut 1/4-20	9	45	1750581	Steering Arm	1
7	• 1186309	Flange Screw 1/4-20 x 5/8	13	46	• 1100049	Hex Head Screw 3/8-16 x 2-1/4	2
8	1758724BDG	Instr. Panel Supp.	1	47	• 1733398	Hex Lock Nut 3/8-16	4
9	1185456	U Type Speed Nut 1/4-20	4	48	• 1708755	Flat Washer 3/8	4
10	1756073BDG	Battery Support	1	49	• 1110150	Lock Nut 3/8-24	2
11	1754179	Push Link	1	50	1716180	Ball Joint	2
12	1703539	Handle Grip	1	51	• 1186247	Jam Hex Nut 1/2-20	2
13	1759450	Lift Lever Ass'y	1	52	1750499	Steering Rod	1
14	• 1186330	Fl. Lock Screw 5/16-18 x 7/8	34	53	1185803	Grease Fitting	1
15	1750957	Lock Nut 1/2-20	2	54	1750811BDG	Attachment Bracket	1
16	1750495	Steering Arm	1	55	• 1186345	Flange Hex Screw 3/8-16 x 3/4	4
17	1805368	Washer	1	56	• 1186393	Flange Hex Nut 3/8-16	4
18	1185427	Retaining Ring	2	57	1758231	Lock Hex Nut 5/8-11	1
19	1747189	Pin	1	58	1758232	Hex Hd. Screw 5/8-11 x 2-1/2	1
20	1757659	Sliding Guide	1	59	1750486	L.H. Spindle Ass'y	1
21	1757661	Lift Guide	1	60	1750490	R.H. Spindle Ass'y	1
22	• 1107385	Flat Washer 1/2	2	61	1750341	Bushing	4
23	• 1186391	Flange Lock Nut 5/16-18	38	62	1718086	Valve Stem	2
24	• 1100350	Cotter Pin 1/8 x 1	2	63	1185976	Grease Fitting	4
25	1751070	Lift Rod	1	64	1750924	Wheel (Incl. Ref. 61 & 63)	2
26	1751715BDG	Bracket	2	65	1750354	Tire 15 x 6.00-6	2
27	1754950	Lift Shaft Ass'y	1	66	1742133	Flange Bearing	4
28	1754944BDG	Fender Support Ass'y	1	67	1185388	Retaining Ring	4
29	1758842	Rear Panel Ass'y	1	68	1701447	Washer	A/R
30	1740984BDG	Axle Support	1	69	1750494	Front Axle Ass'y	1
31	1185388	Retaining Ring	2	70	1750841	Tie Rod	1
32	1747315BDG	Bracket	1	71	1742343BOW	Front Frame	1
33	1177567	Retaining Ring	1	72	1747322	Spacer	2
34	1755847BDG	Rear Frame	1	73	1744444	Wheel Cap	2
35	1742934	Angle Bracket Speed Nut	4	74	1185830	Special Washer	A/R
36	1751284	Steering Shaft	1	75	1747320	Cable Guide	2
37	1730375	Shim Washer	6	76	• 1100043	Hex Screw 3/8-16 x 1-1/4	2
38	1747303	Flange Bearing	1	77	1756177	Pulley	2
39	1750594	Steering Support Assembly	1				

• Common Hardware - Purchase Locally (Grade 5 where applicable)

# SUBURBAN TRACTOR

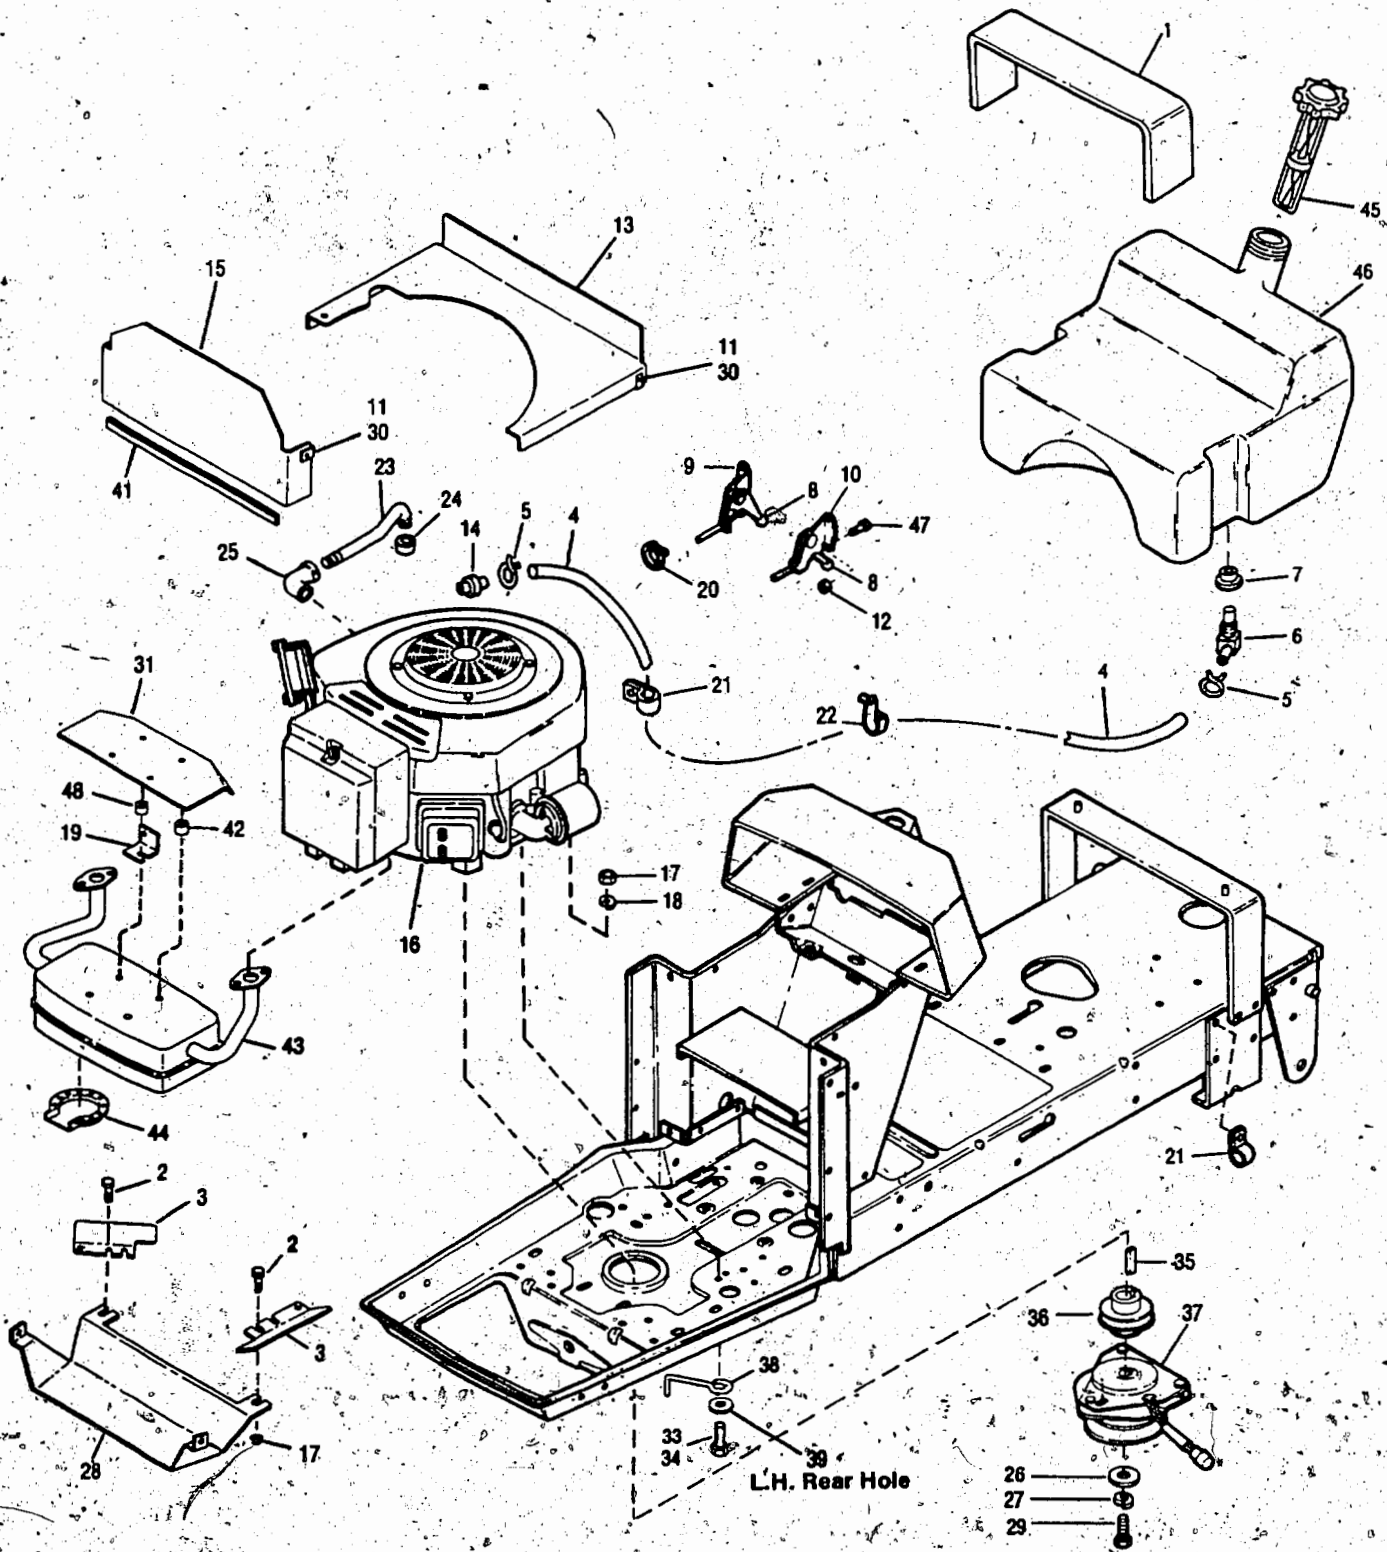

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	1744390	Fuel Tank Pad .....	1	25	1105029	Elbow, 90° .....	1
2	1186329	Fl. Screw 5/16-18 x 3/4 .....	2	26	1744455	Special Washer .....	1
3	1758459BDG	Heat Shield .....	2	27	• 1100244	Lock Washer 7/16 .....	1
4	1752795	Fuel Line .....	1	28	1758464BDG	Heat Shield .....	1
5	1750687	Hose Clamp .....	2	29	1744454	Hex Screw 7/16-20 x 3 .....	1
6	1751477	Fuel Shut Off Valve .....	1	30	1185986	Speed Nut #10-24 .....	4
7	1738433	Bushing .....	1	31	1758463BDG	Heat Shield .....	1
8	1737118	Knob .....	2	32	• 1100069	Hex Screw 1/4-20 x 1 .....	4
9	1758801	Throttle Control .....	1	33	• 1111606	Screw, 5/16-18 x 2 .....	1
10	1758800	Choke Control .....	1	34	• 1100799	Hex Head Screw 5/16-18 x 1-1/2 .....	3
11	• 1115815	Phil. Hd. Screw #10-24 x 5/8 .....	4	35	• 1748146	Sq. Key 1/4 x 1-1/2 .....	1
12	• 1185985	Keps Nut #10-24 .....	4	36	1747148	Sheave .....	1
13	1758426BDG	Heat Shield .....	1	37	1755341	Electric Clutch .....	1
14	1727491	Fuel Filter .....	1	38	1754787	Clutch Retainer .....	1
15	1758429BDG	Heat Shield .....	1	39	• 1100255	Flat Washer 5/16 .....	1
16		Engine, B&S 14 H.P. Model 294777 .....	1	41	1754204	Trim .....	1
17	• 1186230	Hex Nut 5/16-18 .....	6	42	1758719	Spacer .....	3
18	• 1100242	Lock Washer 5/16 .....	4	43	1757949	Muffler .....	1
19	1758768	Sealing Strip .....	1	44	1758940	Deflector, Muffler .....	1
20	1735531	Wire Tie .....	4	45	1756044	Fuel Gauge .....	1
21	1747738	J-Clip .....	3	46	1756460	Fuel Tank (Incl. Ref. 45) .....	1
22	1745366	Cable Hanger .....	3	47	1750962	Screw, #10-24 x 5/8 .....	2
23	1758458	Tube - Oil Drain .....	1	48	1714721	Spacer .....	1
24	1745688	Cap, Pipe .....	1	49	1758311BDG	Bracket .....	1

\* Order Parts from Your local Briggs & Stratton engine dealer

• Common Hardware - Purchase Locally (Grade 5 where applicable)




**MODEL 3214G**

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	1724231	Knob	1	37	1757291	Belt Guide	2
2	• 1107382	Flat Washer 5/16	1	38	• 1733398	Lock Nut 3/8-16	3
3	1705092	Flat Washer	3	39	1748491	Pivot	1
4	• 1111609	Hex Hd. Screw 5/16-18 x 2-3/4	4	40	1751880	Arm Ass'y	2
5	• 1107383	Flat Washer 3/8	10	42	1756047	Shift Lever Ass'y	1
6	1747186	Push on Cap	1	43	1752523	Shift Rod	1
7	1747188	V-Belt (96:88)	1	44	1728908	Compression Spring	1
8	1752796	Belt Guide Rod	1	45	• 1107386	Flat Washer 5/8	2
9	1750297	Belt Guide	1	46	1715538	Nylon Bushing	2
10	1185596	Set Screw	2	47	1751809	Torsion Spring	1
11	1743640	Transmission Sheave	1	48	1746941BDG	Idler Arm Ass'y	1
12	*	5-Speed Transmission Model 801	1	49	1760097	Idler	1
13	1104335	Sq. Key 3/16 x 2	2	50	1760096	Belt Guide	2
14	• 1100255	Flat Washer 5/16	8	51	• 1100049	Hex Hd. Screw 3/8-16 x 2-1/4	1
15	• 1732499	Lock Nut 5/16-18	4	52	• 1100243	Lock Washer 3/8	1
16	1742103BDG	Transmission Support	1	53	1756151	Idler	1
17	• 1186330	Fl Lock Screw 5/16-18 x 7/8	2	54	1742054	Spacer	2
18	• 1186391	Fl Nut 5/16-18	6	55	1750352	Tire 20 x 8.00-10	2
19	• 1724491	Thd. Form Screw 5/16-18 x 3/4	2	56	1718086	Valve Stem	2
20	1746943	Brake Rod	1	57	1750351	Wheel Disc	2
21	1751808	Idler Support Ass'y	1	58	1747998	Washer 3/4	A/R
22	1750526	Torsion Spring	1	59	1185388	Retaining Ring	2
23	1743606	Transmission Arm	1	60	1728694	Foot Rest	1
24	• 1107381	Flat Washer 1/4	1	61	1756049	Brake Pedal Ass'y	1
25	• 1100241	Lock Nut 1/4	1	62	• 1100350	Cotter Pin 1/8 x 1	3
26	• 1111683	Hex Screw 1/4-28 x 1/2	1	63	1714233	Nylon Bushing	4
27	1750946	Pin	1	64	• 1110149	Jam Nut 5/16-24	1
28	1705093	Washer	A/R	65	1751063	Brake Lock Rod	1
29	1750539	Shaft Ass'y	1	66	• 1100359	Cotter Pin 1/8 x 5/8	7
30	• 1104436	Woodruff Key 3/16 x 3/4	1	67	1746942	Clutch Rod	1
31	1750299	Shift Arm Ass'y	1	68	• 1893445	Washer, Flat 3/8	1
32	1186244	Lock Nut 5/16-24	1	69	• 1100086	Screw Hex Hd 3/8-16 x 1-3/4	1
33	1752524	Ball Joint	1	70	1747873	Wheel Cap	2
34	1120210	Roll Pin 3/16 x 1.00	3	71	1713783	Spacer	1
35	• 1186389	Fl Lock Nut 1/4-20	4	72	1749904	Eye Bolt	1
36	1744320	Belt Guide	1	73	1177567	Retaining Ring	1
				74	1729482	Ext. Spring	1
				75	1755584BDG	Interlock Bracket	1

• Common Hardware - Purchase Locally (Grade-5 where applicable)



# SUBURBAN TRACTOR

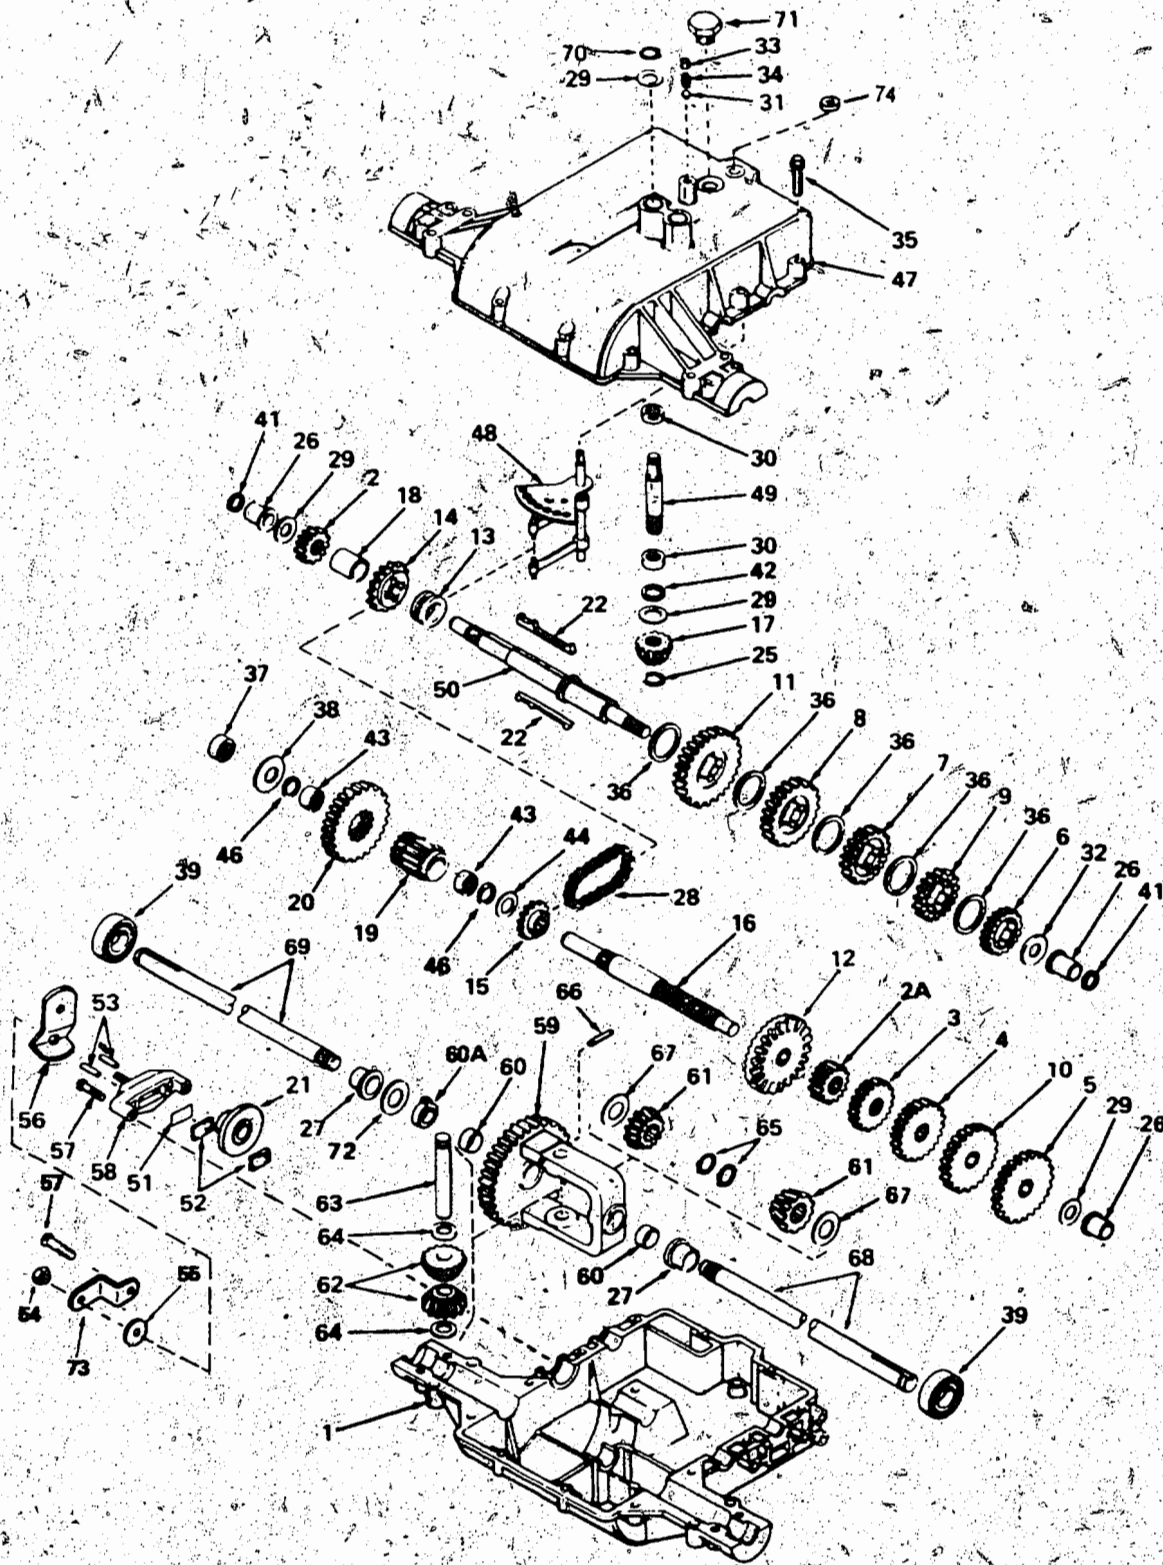



PEERLESS TRANSAXLE MODELS: 801-046

ORDER ALL PEERLESS PARTS FROM YOUR NEAREST  
POWER PRODUCTS TECUMSEH ENGINE DEALER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	770071A	Transaxle Case	38	780113	Flat Washer
2	778136	Spur Gear (15 Teeth)	39	780119	Ball Bearing
2A	778145	Spur Gear (12 Teeth)	41	788051	Square Cut Ring
3	778126A	Spur Gear (20 Teeth)	42	788057	Square Cut Ring
4	778127A	Spur Gear (25 Teeth)	43	780112	Needle Bearing
5	778163	Spur Gear (31 Teeth)	44	780114	Flat Washer
6	778162	Spur Gear (19 Teeth)	46	788053	Square Cut Ring
7	778123A	Spur Gear (25 Teeth)	47	772082	Transaxle Cover
8	778124A	Spur Gear (30 Teeth)	48	784290	Shift Rod & Fork Assembly
9	778122A	Spur Gear (22 Teeth)	49	776226	Input Shaft
10	778128A	Spur Gear (28 Teeth)	50	776183A	Brake Shaft
11	778146A	Spur Gear (37 Teeth)	51	790007	Brake Pad Plate
12	778154	Bevel Gear (42 Teeth)	52	790006	Brake Pad
13	784266	Shift Collar	53	786026	Dowel Pin
14	786060	Sprocket (14 Teeth)	54	792075	Locknut 5/16-24
15	786061	Sprocket (10 Teeth)	55	792076	Flat Washer
16	776204	Counter Shaft	56	790031	Brake Lever
17	778153	Input Bevel Pinion	57	792073	Hex Hd. Thread Forming Screw, 1/4-20 x 1-1/4
18	786074	Spacer	58	790025	Brake Pad Holder
19	778138	Output Pinion	59	778053A	Differential Gear Assembly (Incl. 1 of No. 60)
20	778139	Output Gear	60	780064	Bushing
21	790003	Brake Disk	60A	780120	Bushing
22	792089A	Key	61	778166	Bevel Gear
25	788040	Retaining Ring	62	778131	Bevel Pinion
26	780105A	Flanged Bushing	63	786034	Drive Pin
27	780118A	Flanged Bushing	64	780065	Thrust Washer
28	786062A	Roller Chain (No. 41 Chain, 22 Links)	65	792018	Retaining Ring
29	780072	Thrust Washer	66	792040	Roll Pin
30	780122	Needle Bearing	67	780001	Thrust Washer
31	792077	Steel Ball	68	774670	Axle (15-1/8" Long)
32	780109	Thrust Washer	69	774669	Axle (13-3/16" Long)
33	792078	Set Screw 3/8-16 x 3/8	70	792035	Retaining Ring
34	792079	Spring	71	792074	Hex Hd. Plug 9/16-18 Thread
35	792073	Hex Hd. Thread Forming Screw, 1/4-20 x 1-1/4	73	786086	Bracket
36	780108	Thrust Washer	74	788069	Seal Square Cut
37	780121	Ball Bearing			

SUBURBAN TRACTOR

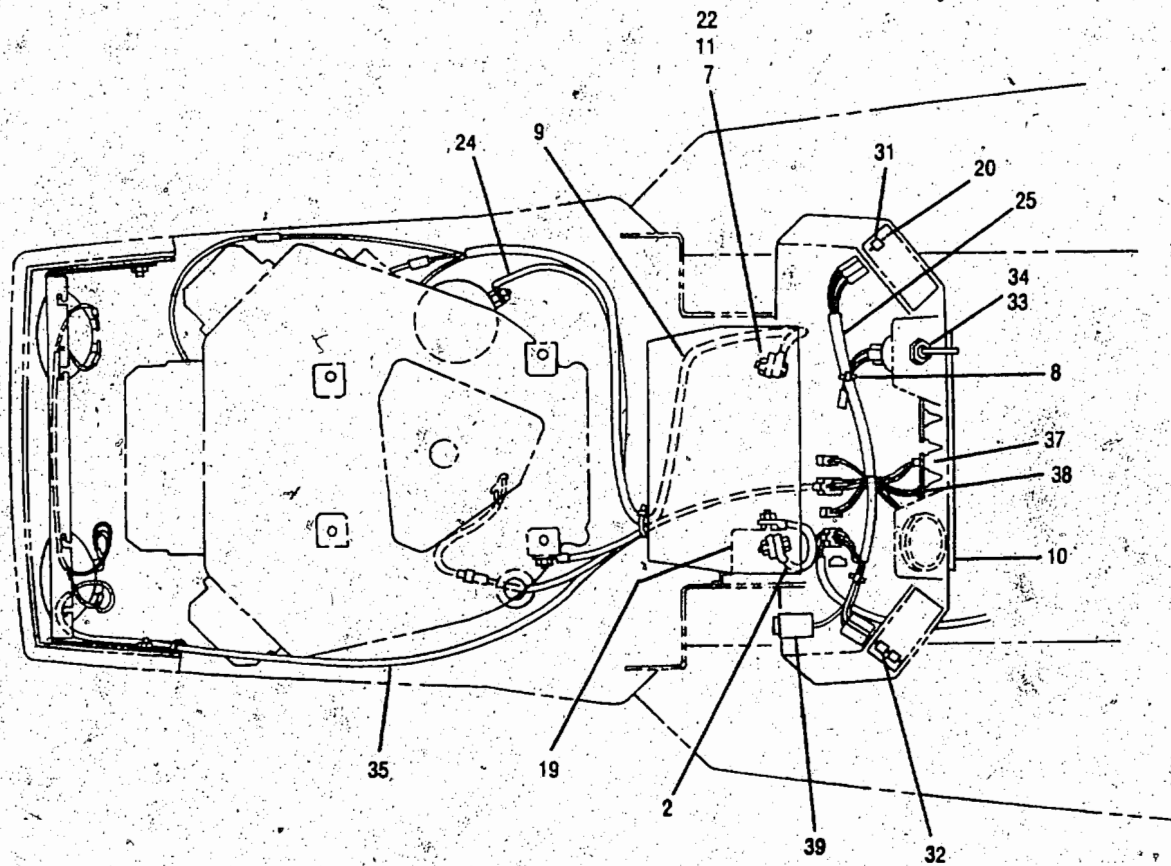

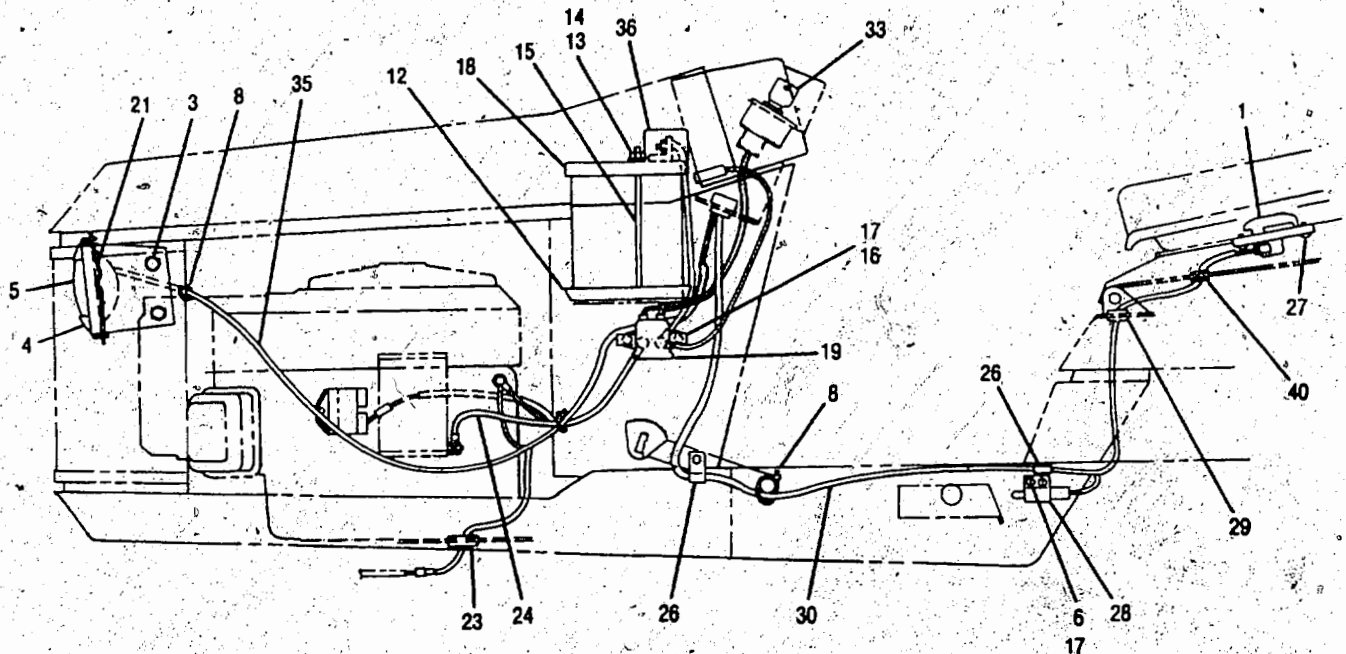


REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	1752506	Switch	1	22	• 1100241	Lock Washer 1/4	2
2	1756074	Battery Cable (Pos.)	1	23	1748014	Grommet	1
3	• 1186389	Flange Lock Nut 1/4-20	4	24	1752841	Starter Cable	1
4	1744021BDG	Light Support	1	25	1752134	Console Wire Harness	1
5	1726435	Headlight	2	26	• 1747738	J-Clip	2
6	1758070	Screw #10-24 x 5/8	2	27	• 1755349	Screw 1/4-20 x 1/2	2
7	• 1111599	Hex Screw 1/4-20 x 5/8	2	28	1751328	Switch	1
8	1735531	Wire Tie	7	29	1734934	Grommet	1
9	1756075	Battery Cable (Neg.)	1	30	1756076	Interlock Harness	1
10	1755910	Lense	1	31	1754608	PTO Switch	1
11	• 1186229	Hex Nut 1/4-20	2	32	1754856	Light Switch	1
12	1753784	Battery Tray	1	33	1754250	Ignition Switch	1
13	• 1107381	Flat Washer 1/4	2	34	1753986	Ignition Key	2
14	1734398	Hex Lock Nut 1/4-20	2	35	1758466	Harness, Engine	1
15	1752586	J-Bolt, Long	2	36	1755802	Cover	1
16	• 1115815	Phil. Hd. Screw #10-24 x 5/8	2	37	1751572	Bulb	3
17	• 1185985	Nut #10-24	4	38	• 1186020	Thd Cut Screw #6-32 x 3/8	1
18	1752840	Battery	1	39	1743516	Replacement Fuse, 30A	1
19	1752137	Solenoid	1	40	1755487	Grommet	1
20	1750963	Screw #6-32 x 1/2	4				
21	1744022	Retainer	2				



• Common Hardware - Purchase Locally (Grade 5 where applicable)

# WIRING DIAGRAM

MODEL 3214G

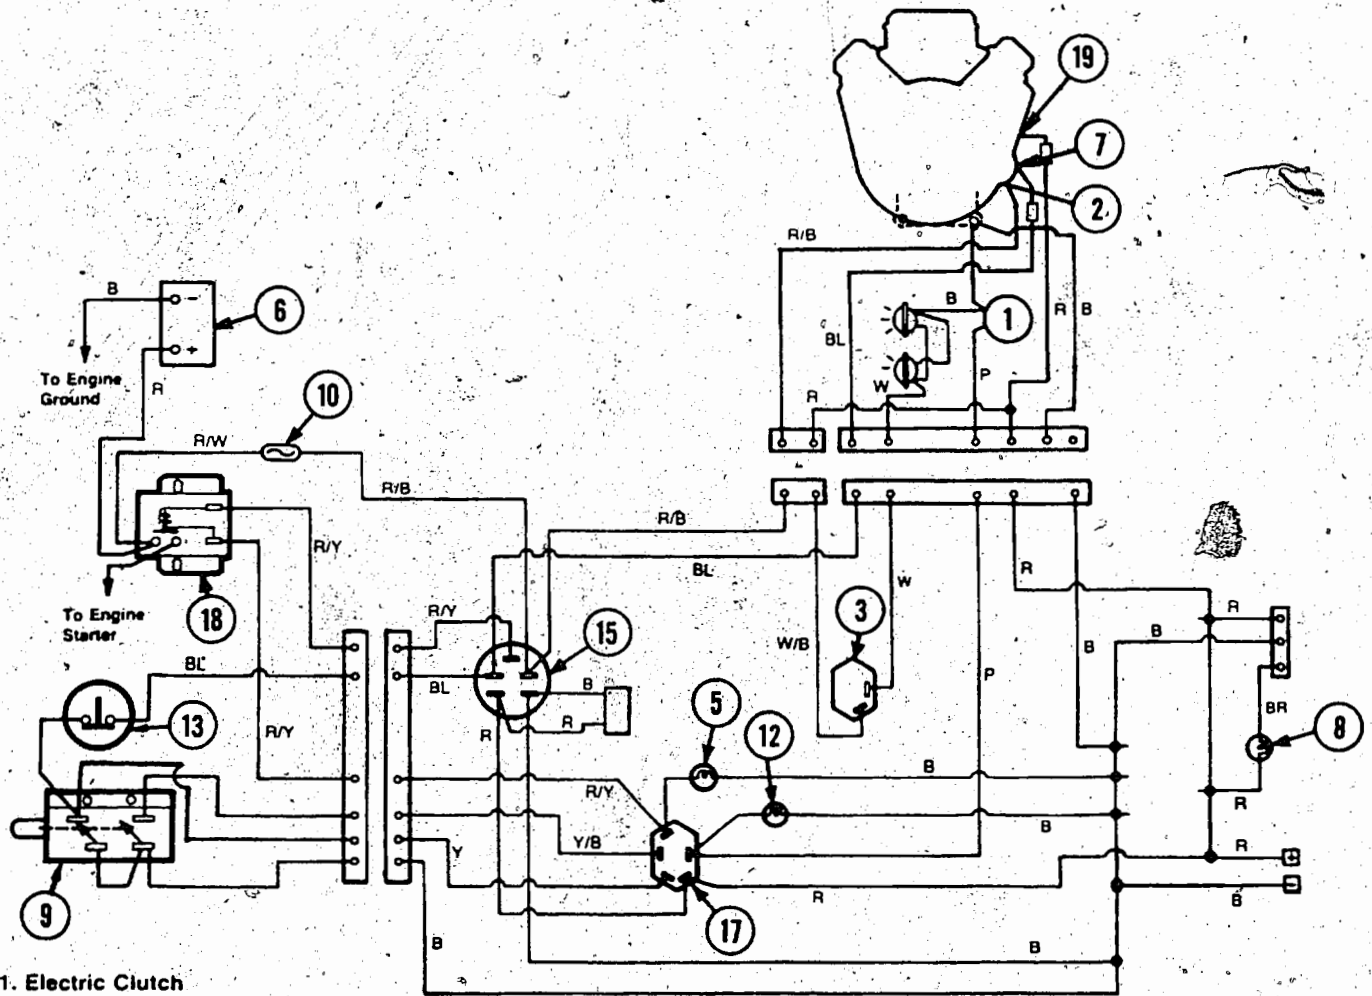

- 1. Electric Clutch
- 2. Magneto
- 3. Light Switch
- 5. Starter Light
- 6. Battery
- 7. Alternator
- 8. Battery Light
- 9. Brake Switch
- 10. Fuse 30A
- 12. PTO Light
- 13. Seat Interlock Switch
- 14. Diode Assembly
- 15. Ignition Switch
- 17. PTO Switch
- 18. Solenoid
- 19. Fuel Solenoid

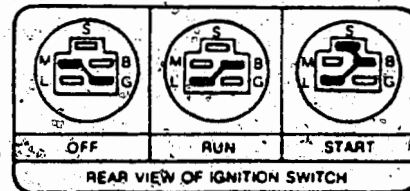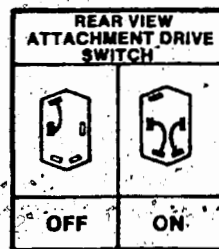

WIRE COLOR CODE	
R	-RED
B	-BLACK
W	-WHITE
O	-ORANGE
Y	-YELLOW
P	-PURPLE
BL	-BLUE
R/W	-RED-WHITE
Y/B	-YELLOW-BLACK
R/B	-RED-BLACK
W/B	-WHITE-BLUE
R/Y	-RED-YELLOW
BR	-BROWN